




OPTICAL CABLE CORPORATION

JANUARY 2012

PROF1U & PROF1USL Instruction Sheet Procyon™ High Density Fiber Panel

 
1. Remove panel from packaging.
2. Inspect panel for damage.
3. The package should contain the following:
 - a. (1) PROF1U or PROF1USL Panel
 - b. (3) each - Writable surface card total 24 cards
 - c. The following hardware:
4. Move rack mount brackets to rear most position.




(4) #12-24 CAGE NUTS



(4) #12-24 X 5/8 PANHEAD SCREWS

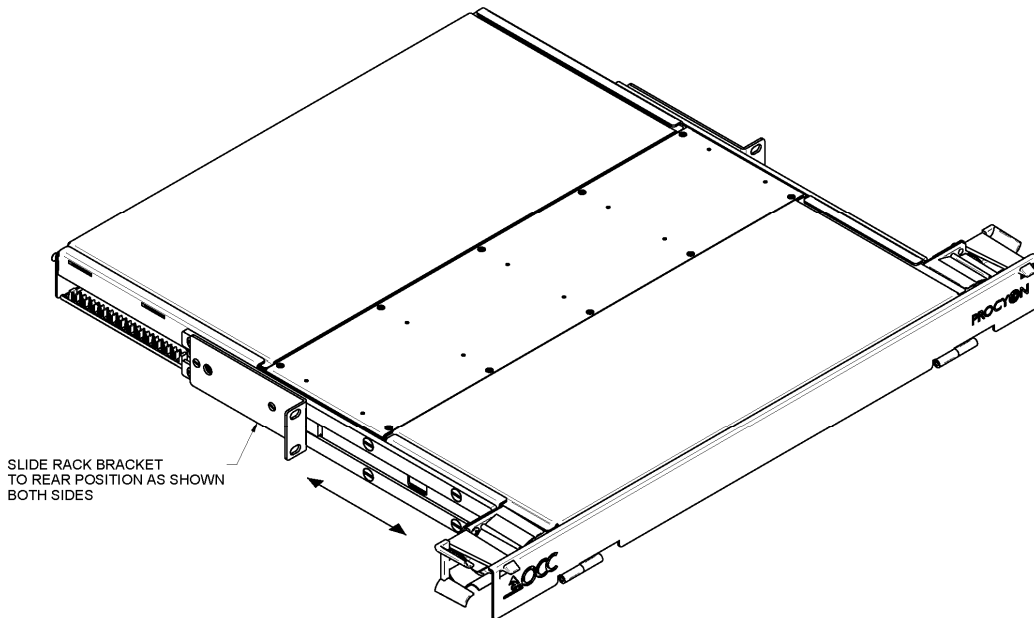


5. Install panel into 19" rack using (4) #12-24 screws and (4) #12-24 cage nuts if required. Screws and cage nuts provided.

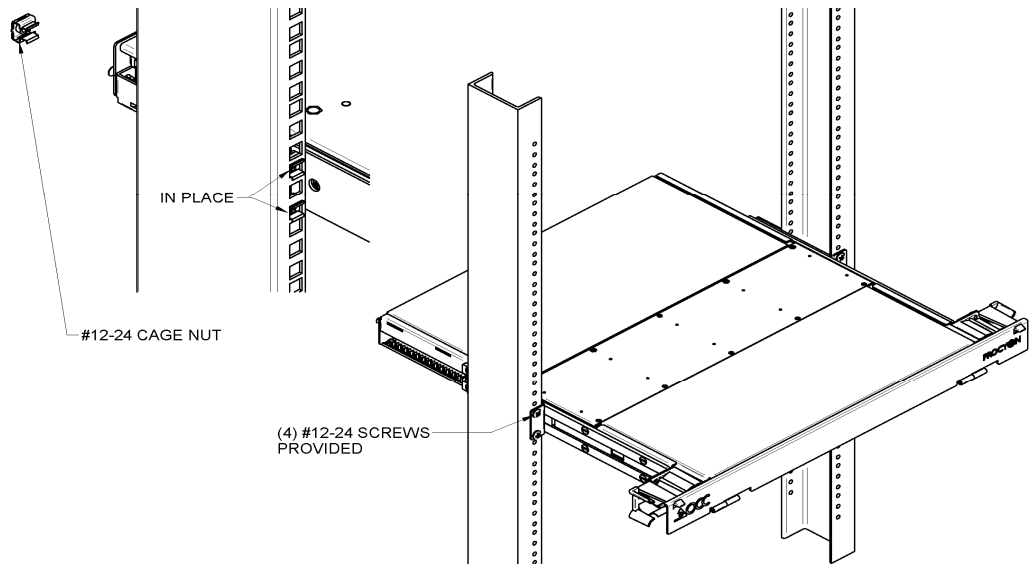


PROCYON™


6. Rotate front cover down. Slide front panel out.

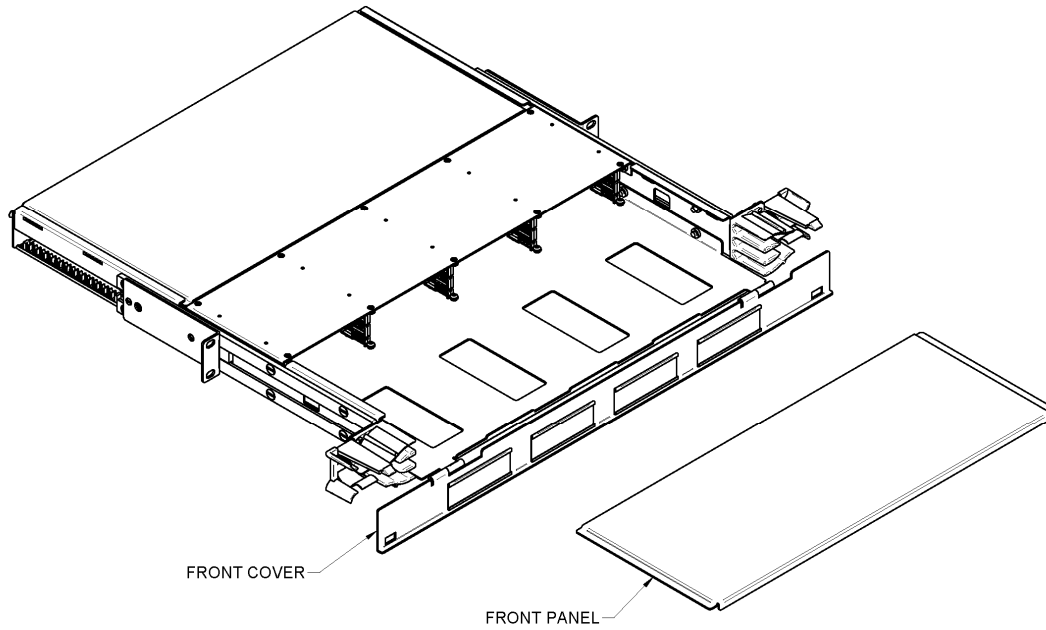


7. Insert appropriate writable surface card in label holder (one of each color).

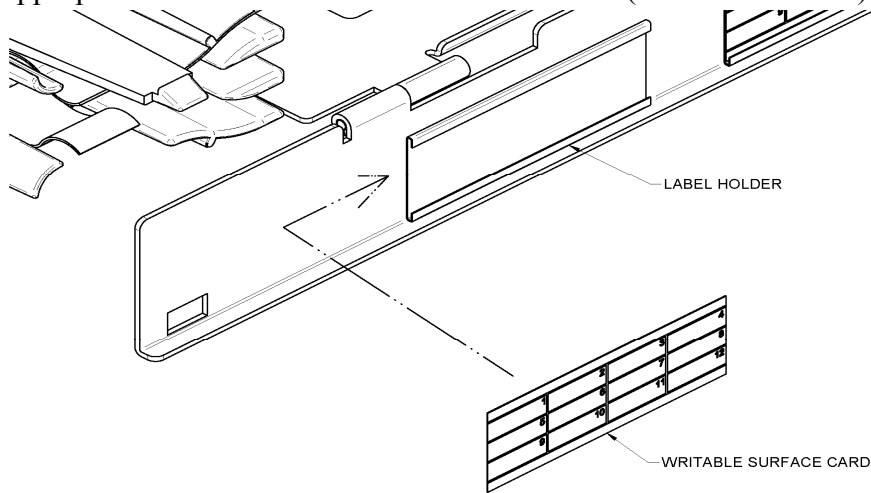


8. Insert appropriate fiber cassette (ordered separately) into panel slots.

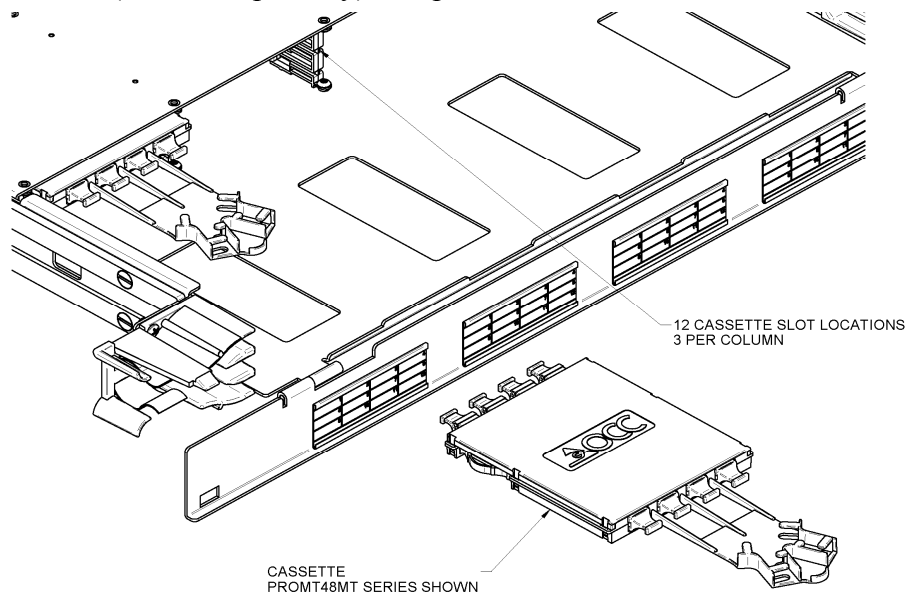


9. Install appropriate fiber jumper cables (ordered separately). Route the cables through the cassette fiber management feature. Route the cable bundle into appropriate groove in panel cable exit organizer. Use small cable ties or Velcro to maintain cable bundle as appropriate.
Note: Jumpers to be made from bend insensitive fiber.

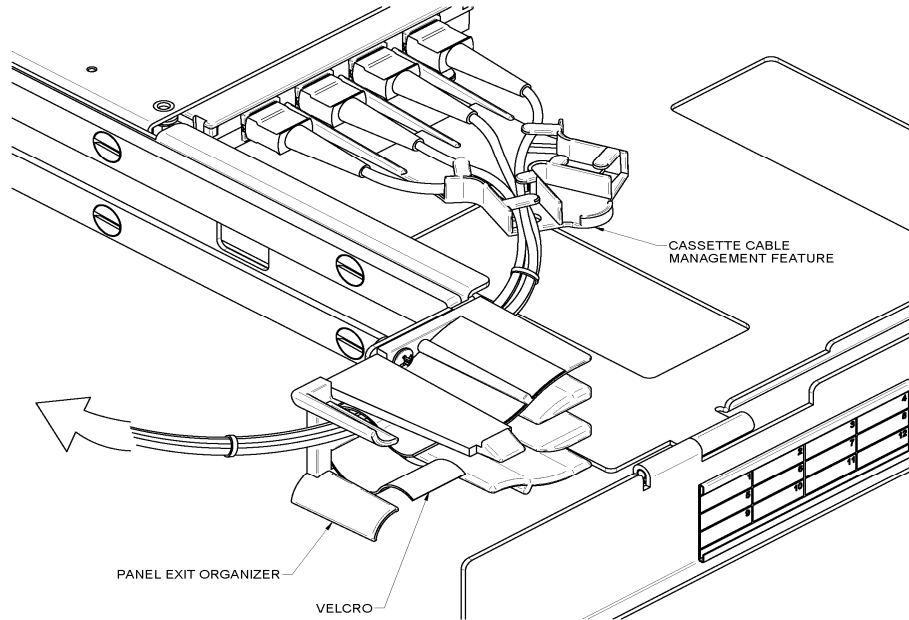

10. Repeat step 8 for all cassettes. Secure with Panel Exit Organizer Velcro strap.
11. Remove panel rear cover, pull push pins to disengage. Note: When multiple panels are present slide panels forward or back as needed to gain access.
12. Take rear cable clamp mechanism apart with thumb screws.

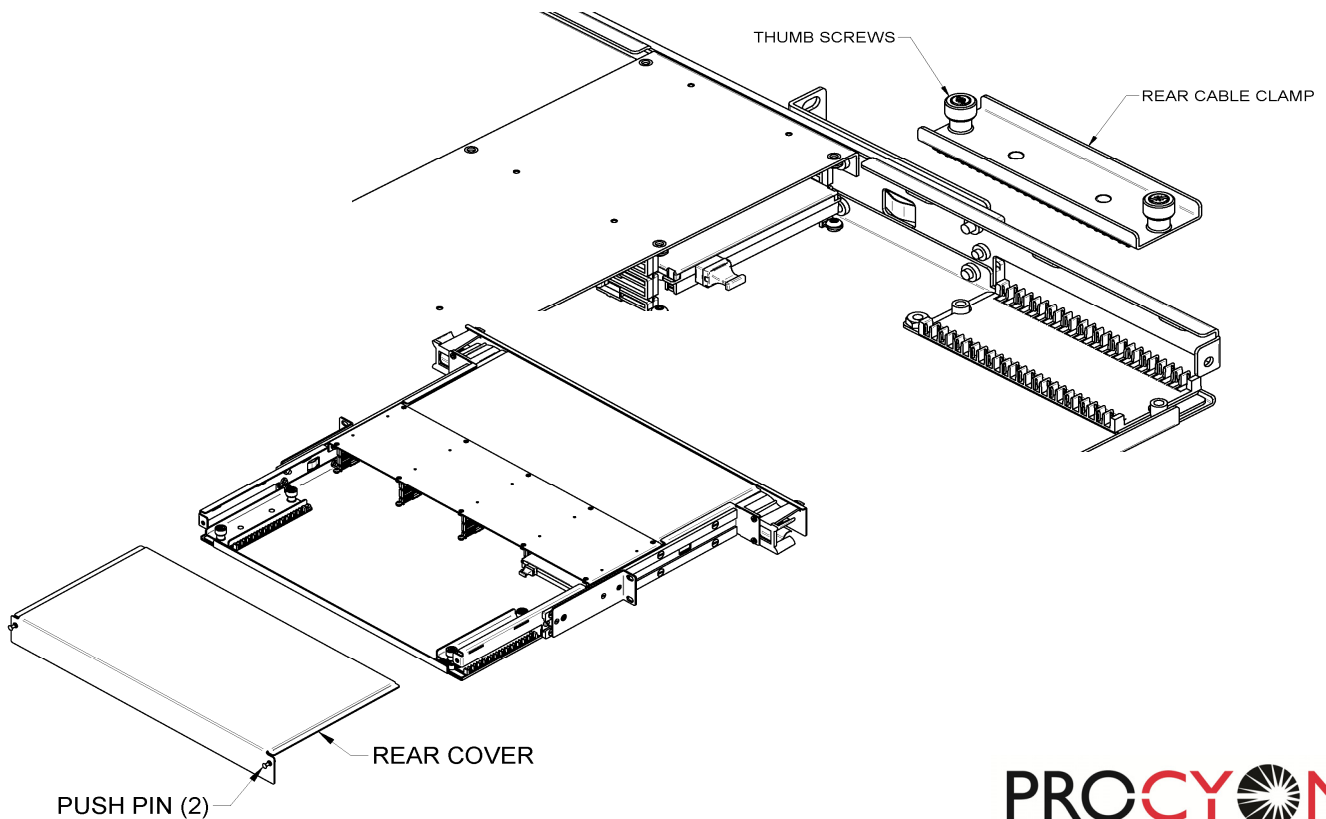

13. Support HD Multi-fiber cable assembly (ordered separately) using appropriate cable support brackets (ordered separately) as shown.

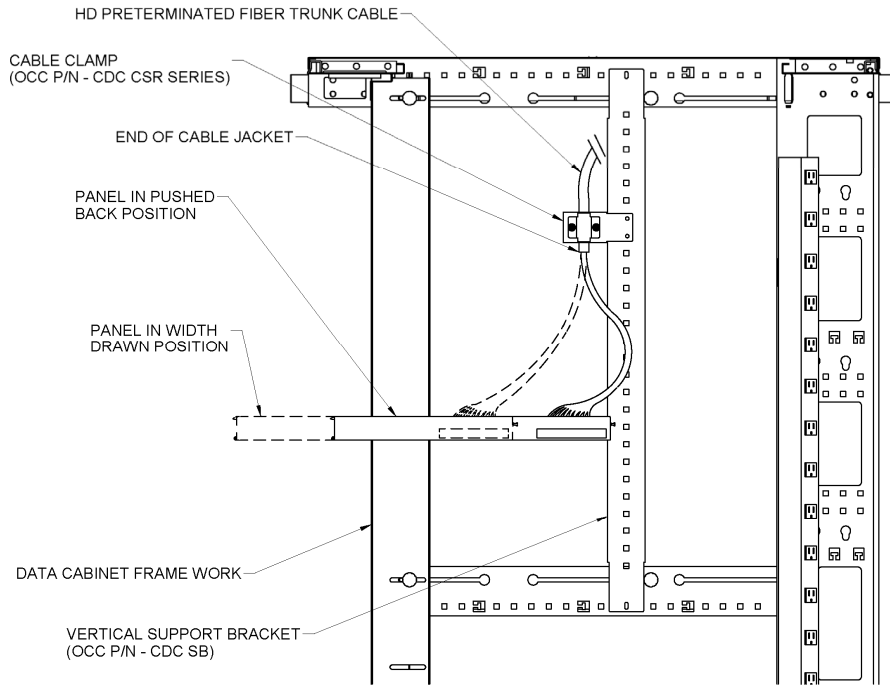

Note: Trunk cable jacket should be stripped back to allow for free movement of the cable below the clamp. Generally about 36 to 40 inches of unjacketed cable is necessary to allow for cable movement and also allow for creating an 'S' bend in the rear of the panel.

14. Maintaining enough slack in cable to allow for panel movement as shown above place MTP cables in rear cable clamp. Create an 'S' bend before plugging into back of cassette.

