

Parts List:

Base:


- 2 - #4 X 1/2" Self-Threading Screws
- 2 - Double-Sided Foam Tapes
- 2 - Cable Ties

Cover:

- 1 - #6-32 X 1" Lg. Oval Head Screw
- 1 - Faceplate Window, Clear (SMEK2 Enc.)
- 2 - Faceplate Windows, Clear (SMEK4 Enc.)
- 1 - Faceplate Card (SMEK2 Enc.)
- 2 - Faceplate Cards (SMEK4 Enc.)
- 4 - Jack Identification Tags (SMEK2 Enc.)
- 6 - Jack Identification Tags (SMEK4 Enc.)
- 1 - KMJ Blank Adapter

Tools Required:

- Straight Screwdriver
- Razor Knife

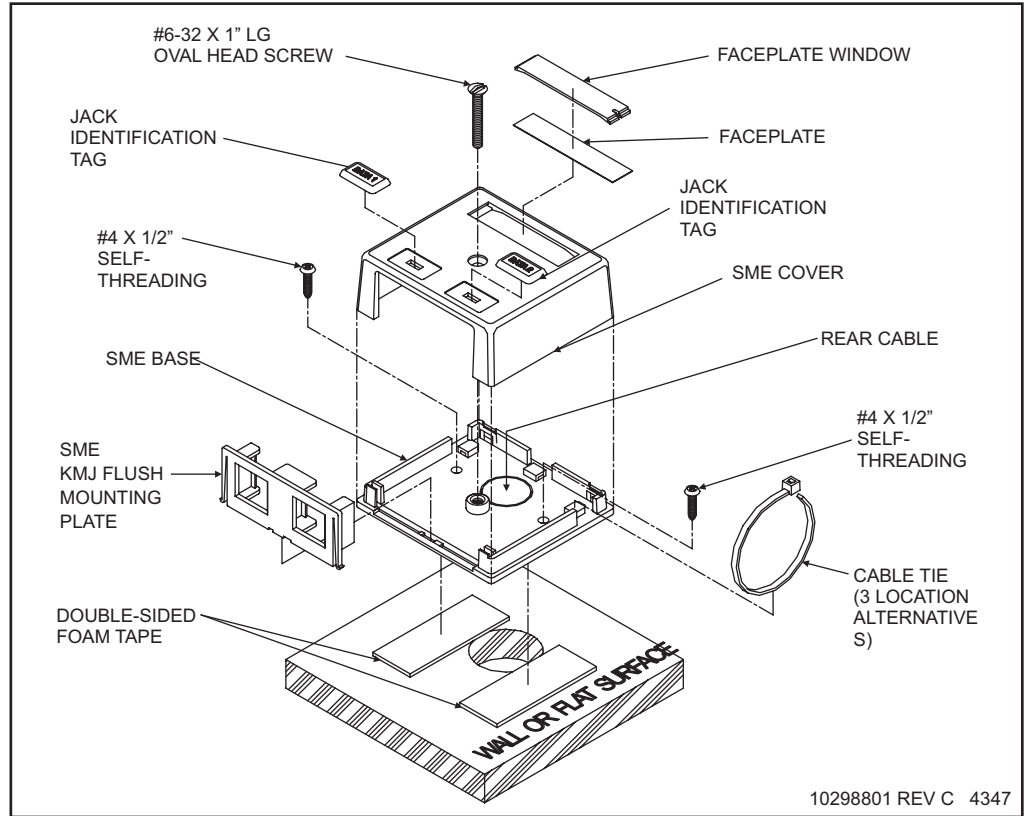

10298801 REV C 4347

Parts List:

Base:


- 2 - #4 X 1/2" Self-Threading Screws
- 2 - Double-Sided Foam Tapes
- 2 - Cable Ties

Cover:

- 1 - #6-32 X 1" Lg. Oval Head Screw
- 1 - Faceplate Window, Clear (SMEK2 Enc.)
- 2 - Faceplate Windows, Clear (SMEK4 Enc.)
- 1 - Faceplate Card (SMEK2 Enc.)
- 2 - Faceplate Cards (SMEK4 Enc.)
- 4 - Jack Identification Tags (SMEK2 Enc.)
- 6 - Jack Identification Tags (SMEK4 Enc.)
- 1 - KMJ Blank Adapter

Tools Required:

- Straight Screwdriver
- Razor Knife

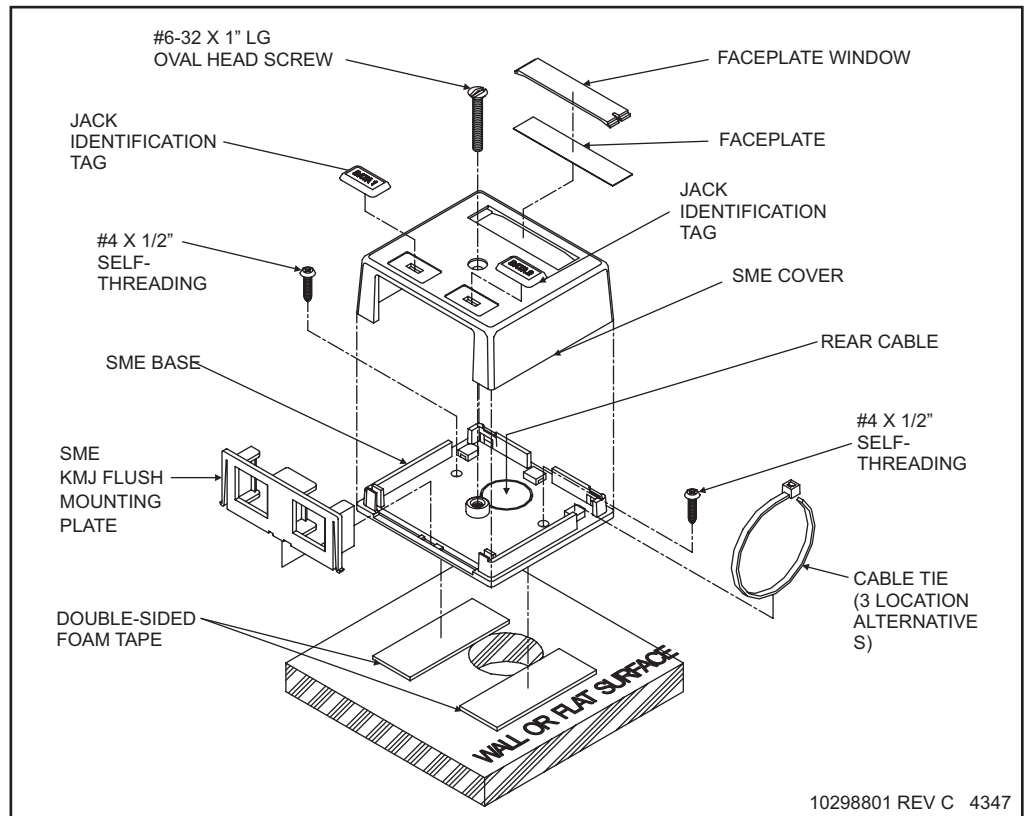

10298801 REV C 4347


STEP 1: Attach base to flat surface using #4 X 1/2" self-threading screws or double-sided foam tape. When using foam tape, remove protective paper from one side and apply to base. Then remove remaining paper and firmly apply unit to clean, dry, flat surface.

STEP 2: Install terminated jacks or AXCESS series components into mounting plate. (Note orientation of plate).

STEP 3: Snap mounting plate into base and secure cables to base using cable ties provided.

STEP 4: Trim cable entry in cover as needed. Attach cover to base using screw provided.

STEP 5: Install jack identification tags and label as needed. (Optional color code jack ID tags available separately).

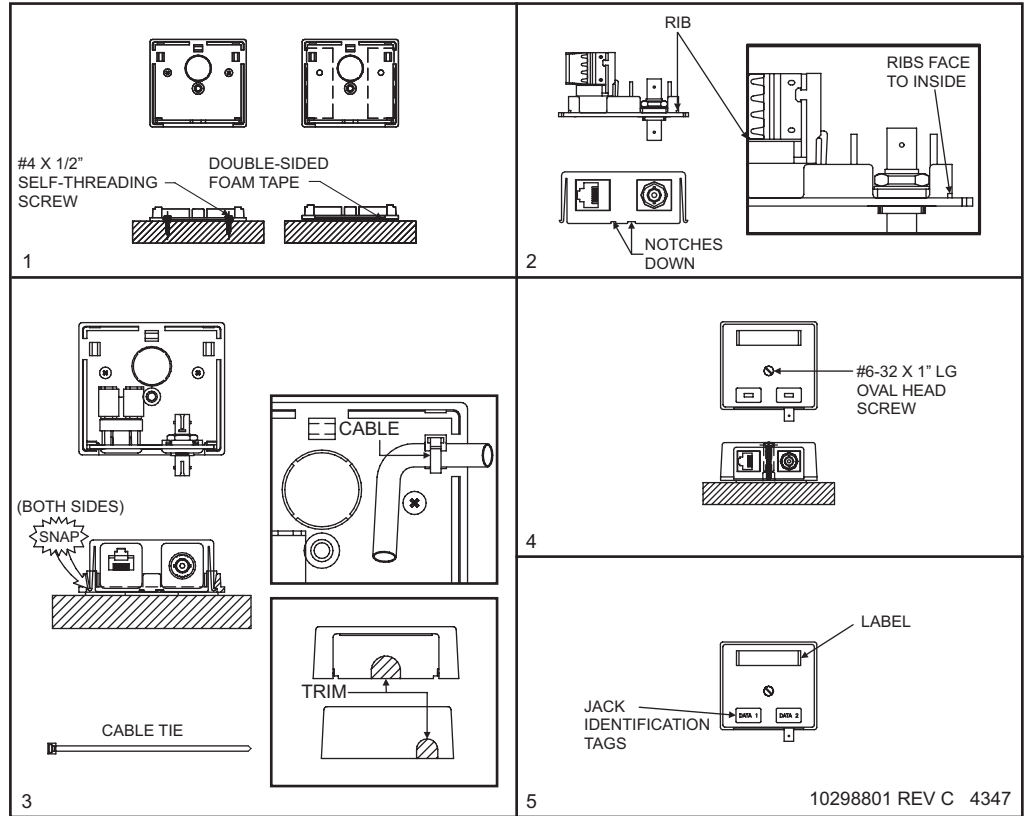

STEP 1: Attach base to flat surface using #4 X 1/2" self-threading screws or double-sided foam tape. When using foam tape, remove protective paper from one side and apply to base. Then remove remaining paper and firmly apply unit to clean, dry, flat surface.

STEP 2: Install terminated jacks or AXCESS series components into mounting plate. (Note orientation of plate).

STEP 3: Snap mounting plate into base and secure cables to base using cable ties provided.

STEP 4: Trim cable entry in cover as needed. Attach cover to base using screw provided.

STEP 5: Install jack identification tags and label as needed. (Optional color code jack ID tags available separately).

