


# SMSG-XX Surface Mount Enclosure Installation Instructions

1. Loop cable tie into positioning holes in base where desired.
2. Attach base to flat surface using either two #8 self-tapping screws or double-sided foam tape. When using foam tape, remove protective paper from one side and apply to Base. Remove remaining paper and firmly apply unit to clean, dry, flat surface.
3. Tighten cable tie securely to base for strain relief.
4. Remove appropriate size cut-out in cover to match conduit.
5. Attach cover to base using two #6-32 fasteners provided.

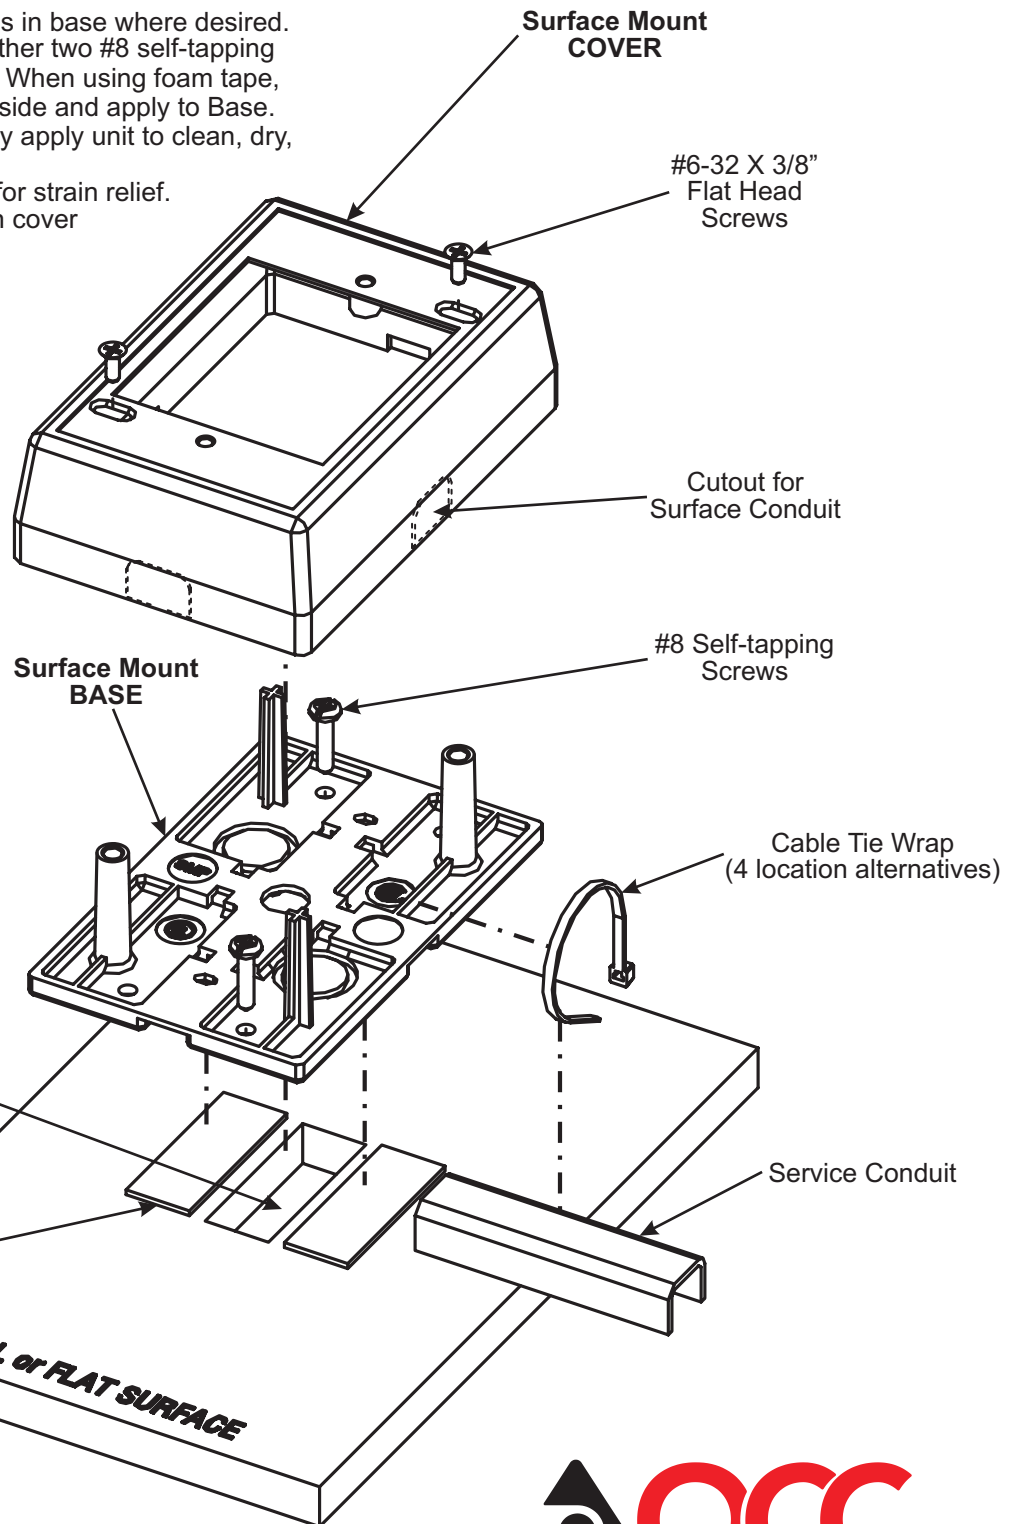

**Parts List:**

**Base**

Two #8 Self-Tapping Screws  
Double-Sided Foam Tape  
Two Cable Ties  
Two #6-32 x 1" Screws  
(For Recessed Box Installation)

**Cover**

Two #6-32 x 3/8" FH Screws

**Tools Required:**

Straight Screwdriver  
Razor Knife

**NOTE:**

Surface Mount Enclosure can also be mounted over standard recessed box (NEMA) or simple cut-out hole (two #6-32 x 1" screws provided.)